



The following excerpt from the Owners Manual is provided to help explain the proper way to safely use this product. If you have any questions please call RSVP at 702-878-0144

Please do not attempt to service or repair this product in any way.

If you experience any problems with this item please discontinue its use and call RSVP at 702-878-0144 for assistance. If for any reason we cannot be reached, please discontinue use of any malfunctioning piece of equipment.

RSVP Party Rentals  
4445 S. Valley View Blvd.  
Suite 7  
Las Vegas, NV 89103

[www.RSVPPARTY.com](http://www.RSVPPARTY.com)

# Sno-King

Instruction Manual

*Model No. 1888, 1888EX*









 **GOLD MEDAL**®

**FUNFOOD EQUIPMENT AND SUPPLIES**

Cincinnati, OH 45241-4807 USA

## SAFETY PRECAUTIONS

	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>Never put your fingers or any object into the shaver body (the goose-neck) while the motor is running. Serious injury may occur. <i>(Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment).</i></p>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>Always wear safety glasses when servicing this equipment.</p>
	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into a receptacle.</p>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.</p>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>This machine is not to be operated by minors. A minor is defined by any person under the age of 18.</p>
	<p style="text-align: center;"><b>⚠ DANGER</b></p> <p>Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing.</p>

### NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.



# INSTALLATION INSTRUCTIONS

## Inspection Of Shipment

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company.

## Setup


Your new *Sno-King* is completely assembled and tested at the factory. Remove all packing material and tape before starting operation.

## Electrical Requirements

The following power supply must be provided:

1888: 120VAC, 60Hz, 972W

1888EX: 230V, 50Hz, 972W

	<b>⚠ DANGER</b>
	Machine must be properly grounded to prevent shock in case of electrical problems. Wall receptacle must be wired as shown on the receptacle. Failure to wire properly will void the warranty and can result in damage to motors, elements, relay, lights, etc.

Your electrician must furnish sufficient power for proper machine operation. We recommend this shaver be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine.

It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

## Before You Plug In the Machine

1. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. **DO NOT** use a grounded to un-grounded receptacle adapter.



## GENERAL INSTRUCTIONS

### To Operate the Sno-King

1. Load hopper with Ice.
2. Close pusher cap, and apply gentle downward pressure.
3. Turn on the power switch.
4. Press and hold in the momentary switch. Release the button once all of the ice has been shaved.
5. Do not lift the pusher cap until the motor is off and the shaver head has stopped.

**NOTE:** Never allow any foreign or metallic objects around the shaver area of the *Sno-King*. Ice picks, scoops, and debris that may be in the ice often damage blades.

### Ice Requirements

The *Sno-King* can take ice cubes or block ice, if you break the block into pieces approximately 2 to 3 inches in size.

**NOTE:** The ice will not enter the shaving chute if the pieces are too large.

### Daily: Cleaning the Ice Shaver

1. Wipe the outside parts with a clean cloth.  
**DO NOT use oven cleaners, as they will damage parts of the machine.**
2. Ammonia cleaners will damage the Lexan Windows. Use only non-ammonia cleaners, such as **Gold Medal®** Watchdog Glass Cleaner (item number 2588).