



The following excerpt from the Owners Manual is provided to help explain the proper way to safely use this product. If you have any questions please call RSVP at 702-878-0144

Please do not attempt to service or repair this product in any way.

If you experience any problems with this item please discontinue its use and call RSVP at 702-878-0144 for assistance. If for any reason we cannot be reached, please discontinue use of any malfunctioning piece of equipment.

**PLEASE NOTE THAT PROPANE FUELED ITEMS ARE FOR OUTDOOR USE ONLY**

RSVP Party Rentals  
4445 S. Valley View Blvd.  
Suite 7  
Las Vegas, NV 89103

[www.RSVPPARTY.com](http://www.RSVPPARTY.com)

# P-60 / 60 Special

## Instruction Manual

Model No.1866, 1866XJ, 2085, 2086, 2656, 2656KC



1866, 1866XJ, 2086



2085, 2656









2656KC

 **GOLD MEDAL®**  
**FUNFOOD EQUIPMENT AND SUPPLIES**

Cincinnati, OH 45241-4807 USA



## SAFETY PRECAUTIONS

	<b>⚠ DANGER</b> Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. <span>008GEND1112</span>
	<b>⚠ DANGER</b> Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. <span>014GEND1112</span>
	<b>⚠ WARNING</b> To avoid burns, do NOT touch the kettle or any heated surface. Do NOT place or leave objects in contact with heated surfaces. <span>013PW1112</span>
	<b>⚠ WARNING</b> ALWAYS wear safety glasses when servicing this equipment. <span>010GENW1112</span>
	<b>⚠ CAUTION</b> Do NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. <span>012GENC1112</span>
	<b>⚠ CAUTION</b> This machine is NOT to be operated by minors. <span>007GENC0413</span>

**NOTE:** Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. *(Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)*



## GENERAL INSTRUCTIONS

### INSPECTION OF SHIPMENT

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company.

### SETUP

Your new Popper was assembled and tested at the factory. Remove all packing material and tape before starting operation.

### ELECTRICAL REQUIREMENTS

**Models 1866, 2086, 2085:** 120V, 60Hz, 1220W

**Models 2656, 2656KC:** 120V, 60Hz, 1300W

**Model 1866XJ:** 100V, 50/60Hz, 1220W

Your electrician must furnish sufficient power for proper machine operation. We recommend this popper be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine.

It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended. This may cause sacrificed and/or reduced performance and can become a safety hazard.

	<p><b>⚠ DANGER</b></p> <p>Machine must be properly grounded to prevent shock in case of electrical problems. Wall receptacle must be wired as shown on the receptacle. Failure to wire properly will void the warranty and can result in damage to motors, elements, relay, lights, etc.</p>
--	--

### BEFORE YOU PLUG IN THE MACHINE

1. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. **DO NOT** use a grounded to un-grounded receptacle adapter.



## OPERATING INSTRUCTIONS

### CONTROLS AND THEIR FUNCTIONS

**LIGHT AND WARMER SWITCH:** Turns on the heat to the bottom corn pan and heat light.

**KETTLE MOTOR SWITCH:** Turns on the motor which drives the kettle agitator.

**KETTLE HEAT SWITCH:** Supplies power to the thermostat controlled kettle



### AUTO SHUT OFF

The 1866 and 2656 Models are equipped with an auto shut-off mechanism. If the kettle heat is on with no product popping for fifteen minutes, the auto shut-off will turn off the kettle heat element and the kettle heat switch will flash. To pop a new batch of corn, cycle the kettle heat switch off and then back on.

### AMOUNT OF POPCORN AND OIL

Your new Popper is equipped with a 6 oz corn measuring cup (Part No. 49049).


Corn charge – 6 oz.

Oil charge – 1.6 to 2.0 oz.

Flavacol – 1 teaspoon

### POPPING INSTRUCTIONS

1. Turn *Kettle Heat* and *Kettle Motor* switch on.
2. Make a test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
3. When the 3 kernels have popped, load the kettle with corn and oil charge.
4. When corn has popped, dump the kettle.
5. Repeat cycle starting with step number 3 above; always pop 3-5 batches for best popcorn.

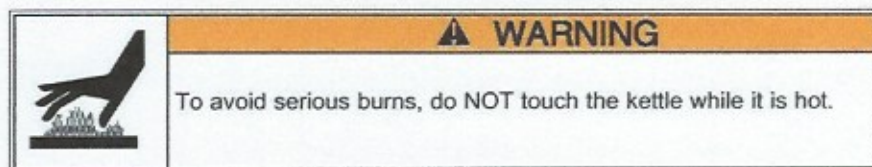

## CARE AND CLEANING

### KETTLE


1. Each time you finish a series of popping, allow the kettle to cool down and wipe the outside of the kettle with a soft cloth to remove any oil drippings left behind.
2. After you finish popping for the day, allow the kettle to cool until it is not too hot to handle, but still warm.
3. Unplug the kettle and remove it from the machine.
4. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle.

**NOTE:** DO NOT place the kettle in water. This will cause damage to the electrical components and will void your warranty.

### CABINET

Cleaning the cabinet of your machine is easy. Take a clean cloth and wipe excess grease from the glass. Wipe the outside of the machine also.

**NOTE:** Never use a glass or plastic cleaner that contains ammonia. It will crack the plastic on the machine.

	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>Unplug your machine before cleaning glass panels and case. Never immerse the kettle in water, this will ruin the electrical components and automatically void the warranty.</p>
---	--